

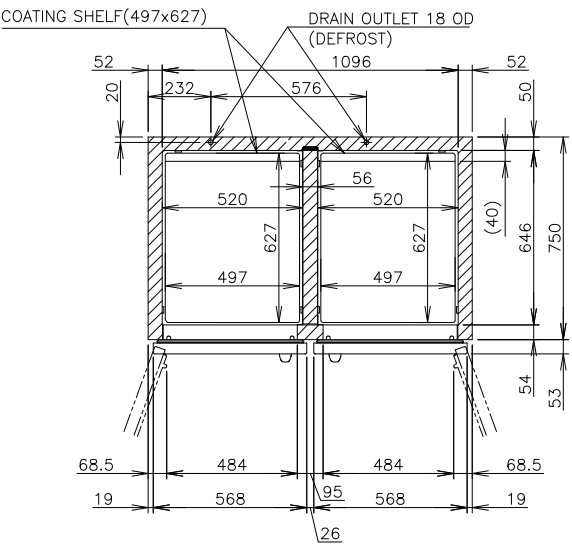
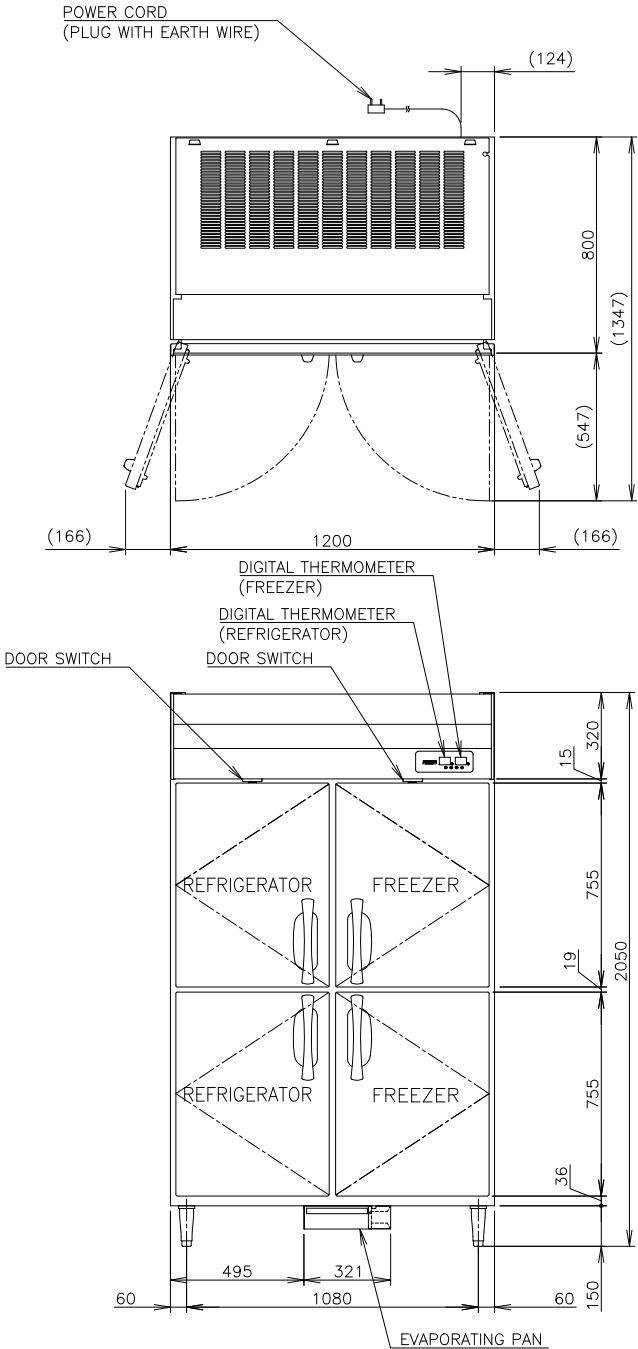
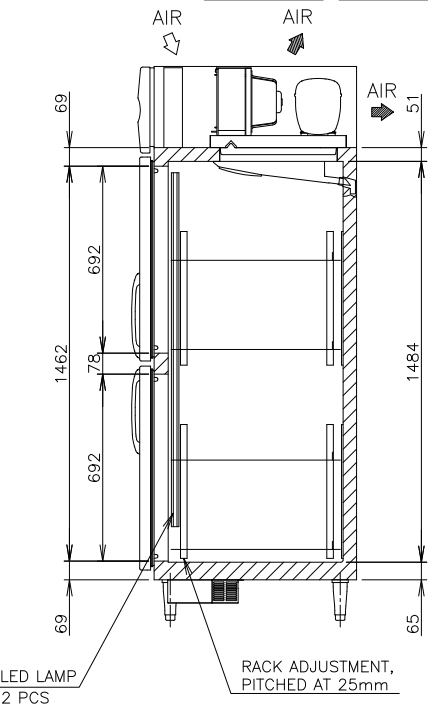


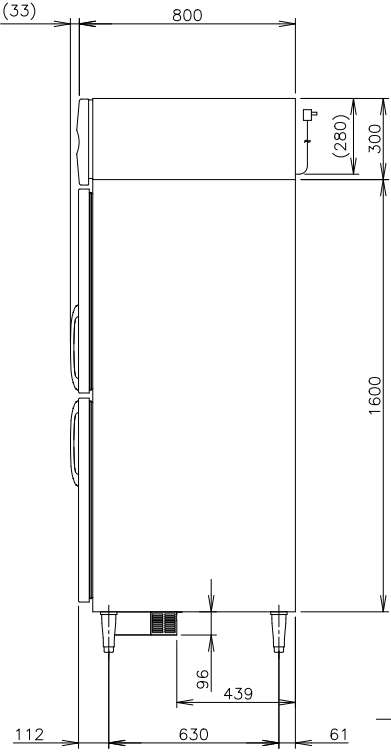

2. The heat rejection is based on the reached pulldown temperature at ambient temperature of 35°C.
3. Product Code:
S195-V100 HVN
S195-V200 HID
S195-V300 HTH
S195-V400 HMS

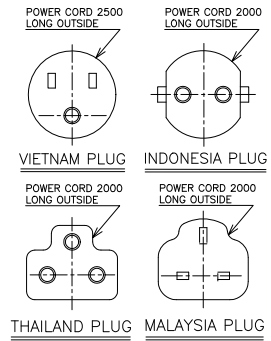

ITEM	Hoshizaki Reach-in Freezer/Refrigerator		
MODEL	HRFE-128SC-S		
POWER SUPPLY	1 Phase 220~240V 50Hz Capacity: 0.87 kVA(3.80A)		
AMPERAGE	Rated: 4.1A		
ELECTRIC CONSUMPTION	MOTOR 325W(POWER FACTOR 65%) Heater 746W Refrigeration 544W Defrost 500W		
HEAT REJECTION	1165W		
POWER CORD	Plug with Earth Wire		
EFFECTIVE CAPACITY	Total 1028L (Refrigerator: 514L, Freezer: 514L)		
OUTSIDE DIMENSIONS	1200mm(W)×800mm(D)×2050(−2080)mm(H)		
INSIDE DIMENSIONS	Refrigerator	520mm(W)×646mm(D)×1484mm(H)	
	Freezer	520mm(W)×646mm(D)×1484mm(H)	
EXTERIOR	Stainless Steel, Galvanized Steel (Rear / Bottom), PP (Handle on Door)		
INTERIOR	Stainless Steel, ABS Plastic		
INSULATION	Polyurethane Foam		
INSULATION FOAM BLOWING AGENT	Cyclopentane		
REFRIGERATION SYSTEM	Forced Air Circulation		
DEFROST SYSTEM	Refrigerator	Heater	
	Freezer	Heater	
COMPRESSOR	Refrigerator	Hermetic, Constant	
	Freezer	Hermetic, Inverter	
CONDENSER	Refrigerator	Fin and Tube type, Air-cooled	
	Freezer	Fin and Tube type, Air-cooled	
EVAPORATOR	Refrigerator	Fin and Tube type	
	Freezer	Fin and Tube type	
REFRIGERANT	Refrigerator	R290	
	Freezer	R290	
TEMPERATURE CONTROL	Refrigerator	Microprocesso controlled Adjustable from −6 to 12° C	
	Freezer	Microprocesso controlled Adjustable from −25 to −7° C	
DEFROST CONTROL	Microprocessor		
ELECTRIC CIRCUIT PROTECTION	Earth Wire, Circuit Breaker		
COMPRESSOR PROTECTION	Inverter Protector (Auto−reset)		
LEG	Plastic Adjustable from 150 to 180mm		
SHELF	8 pcs.		
WEIGHT	Net: 168kg (Gross:Approx. 194kg)		
PACKAGE	Carton (Wooden Pallet) 1260mm(W)×900mm(D)×2075mm(H)		
ACCESSORIES	Drain Hose×1, Evaporating Pan×1		
OPERATING CONDITIONS	Ambient Temperature: 5−43°C Voltage Range: Rated Voltage±6%		

*We reserve the right to make changes in specifications and design without prior notice.

1. Install the product properly in accordance with the instructions on location, water supply/drain connections and electrical connections stated in the instruction and installation manuals provided.

Allow 10mm extra space at the installation site to meet any installation requirements (additional spacing is also required for proper air flow and pipe connections).