

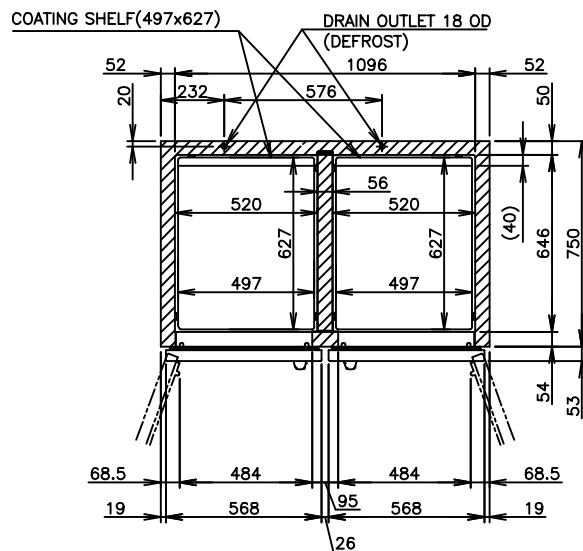
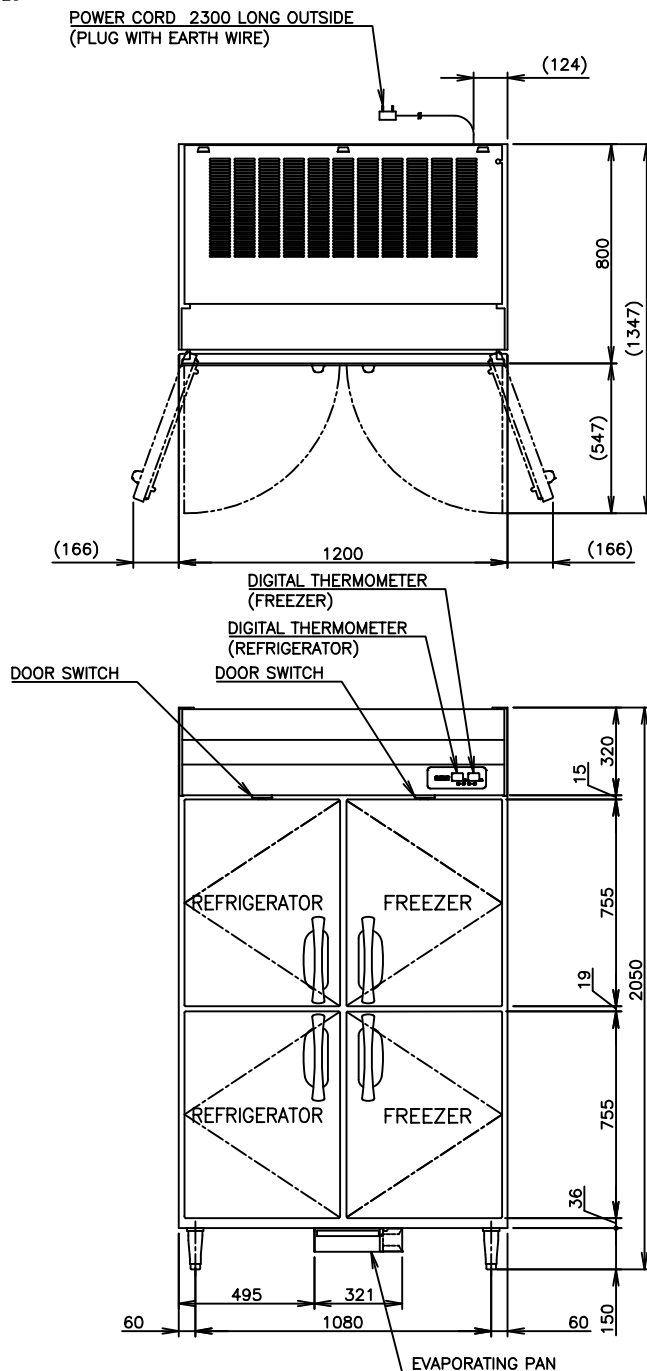


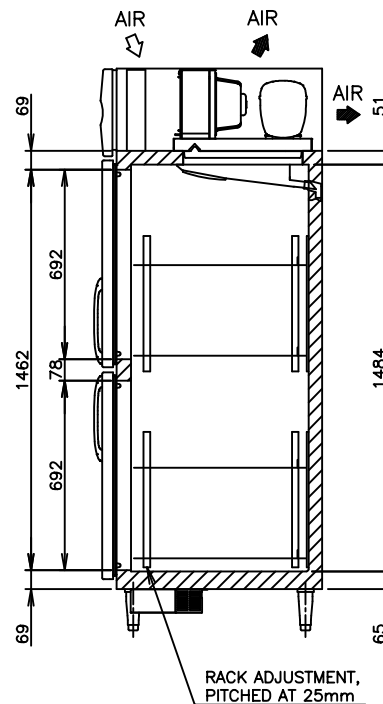

- The heat rejection is based on the reached pulldown temperature at ambient temperature of 35°C.
- Product Code: S195-C300

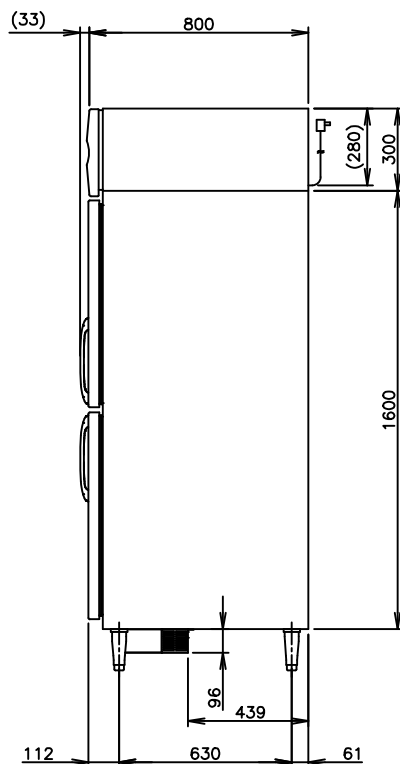

ITEM	Hoshizaki Reach-in Freezer/Refrigerator	
MODEL	HRFE-128SC-P	
POWER SUPPLY	1 Phase 230V~ 60Hz Capacity: * kVA(*A)	
AMPERAGE	Rated: *A	
ELECTRIC CONSUMPTION	MOTOR *W(POWER FACTOR %) Heater *W Refrigeration *W Defrost *W	
HEAT REJECTION	*W	
POWER CORD	2.3m(Plug with Earth Wire)	
EFFECTIVE CAPACITY	Total 1028L (Refrigerator: 514L, Freezer: 514L)	
OUTSIDE DIMENSIONS	1200mm(W)×800mm(D)×2050(-2080)mm(H)	
INSIDE DIMENSIONS	Refrigerator	520mm(W)×646mm(D)×1484mm(H)
	Freezer	520mm(W)×646mm(D)×1484mm(H)
EXTERIOR	Stainless Steel, Galvanized Steel (Rear / Bottom), PP (Handle on Door)	
INTERIOR	Stainless Steel, ABS Plastic	
INSULATION	Polyurethane Foam	
INSULATION FOAM BLOWING AGENT	Cyclopentane	
REFRIGERATION SYSTEM	Forced Air Circulation	
DEFROST SYSTEM	Refrigerator	Heater
	Freezer	Heater
COMPRESSOR	Refrigerator	Hermetic, Constant
	Freezer	Hermetic, Inverter
CONDENSER	Refrigerator	Fin and Tube type, Air-cooled
	Freezer	Fin and Tube type, Air-cooled
EVAPORATOR	Refrigerator	Fin and Tube type
	Freezer	Fin and Tube type
REFRIGERANT	Refrigerator	R290
	Freezer	R290
TEMPERATURE CONTROL	Refrigerator	Microprocesso controlled Adjustable from -6 to 12° C
	Freezer	Microprocesso controlled Adjustable from -25 to -7° C
DEFROST CONTROL	Microprocessor	
ELECTRIC CIRCUIT PROTECTION	Earth Wire, Circuit Breaker	
COMPRESSOR PROTECTION	Inverter Protector (Auto-reset)	
LEG	Plastic Adjustable from 150 to 180mm	
SHELF	8 pcs.	
WEIGHT	Net: 168kg (Gross: Approx. 194kg)	
PACKAGE	Carton (Wooden Pallet) 1260mm(W)×900mm(D)×2075mm(H)	
ACCESSORIES	Drain Hose×1, Evaporating Pan×1	
OPERATING CONDITIONS	Ambient Temperature: 5-43°C Voltage Range: Rated Voltage±6%	

*We reserve the right to make changes in specifications and design without prior notice.

1. Install the product properly in accordance with the instructions on location, water supply/drain connections and electrical connections stated in the instruction and installation manuals provided.
Allow 10mm extra space at the installation site to meet any installation requirements (additional spacing is also required for proper air flow and pipe connections).