



DEEP FREEZER

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

PARTS LIST

[Southeast Asia]

V112-D001, V114-D001, V115-D001,

D-0 JUL. 2024

V112-5551 (0624)

List of Specifications

HDF-140A-SEA	V112-D001	For Southeast Asia
HDF-300A-SEA	V114-D001	For Southeast Asia
HDF-400A-SEA	V115-D001	For Southeast Asia

Auxiliary Codes

Auxiliary Code Breakdown

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts


Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

MARKS LOCATED UNDER THE AUXILIARY CODE

- = Part deleted.

FASTENER PART NUMBER


SCREWS

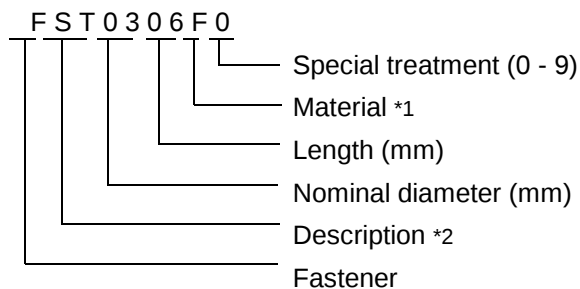

*1


F: Steel
S: Austenitic stainless steel
M: Martensitic stainless steel
B: Copper alloy
P: Polycarbonate
N: Polyamide
V: PVC
A: ABS
X: Polyacetal
L: Aluminum


NUTS & WASHERS

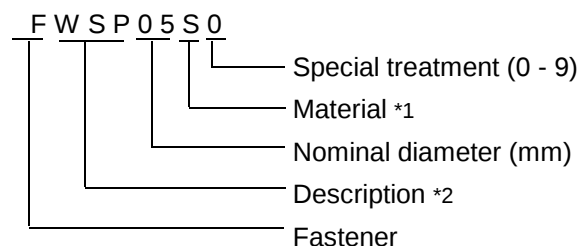


*2

First letter
S: Machine screw
T: Tapping screw
M: Wood screw
B: Bolt
W: Washer
N: Nut

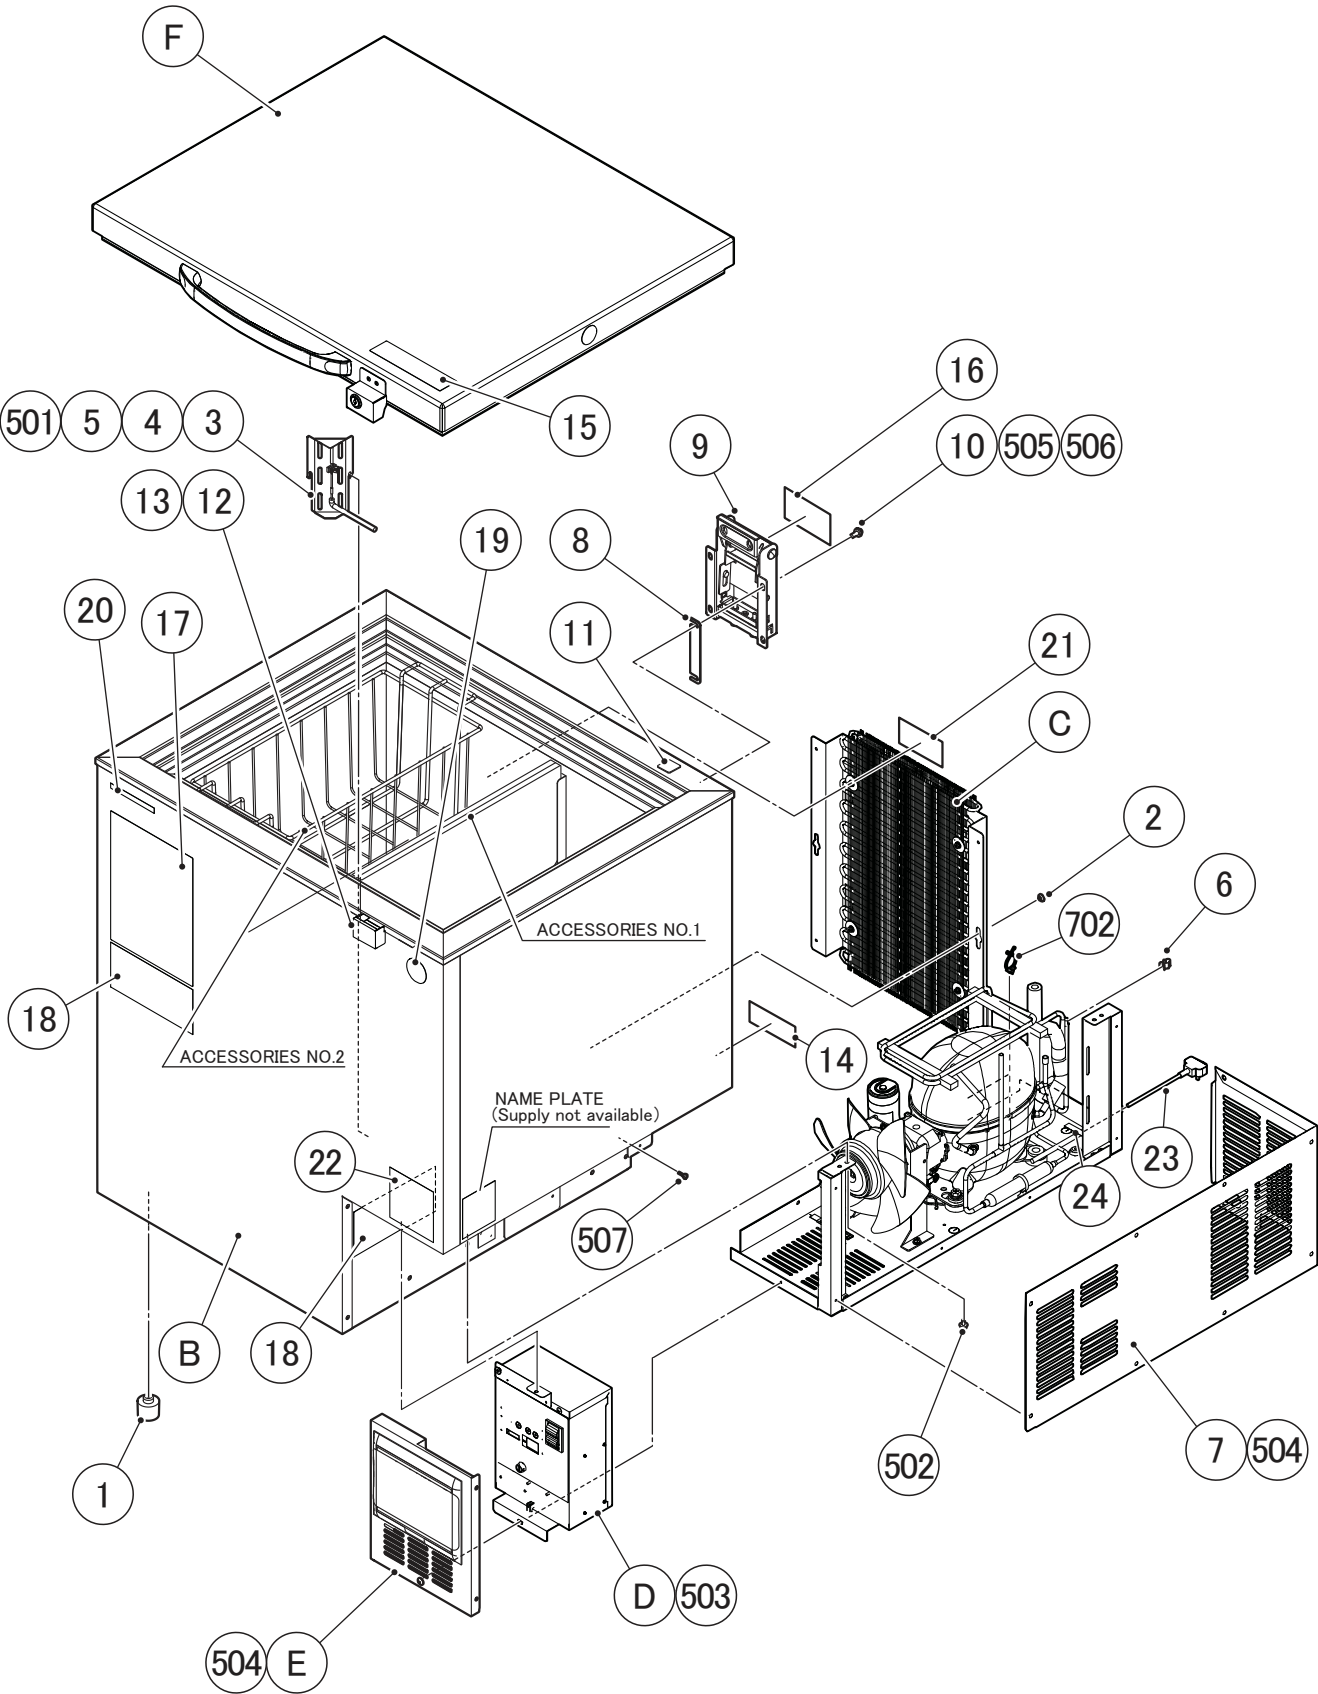

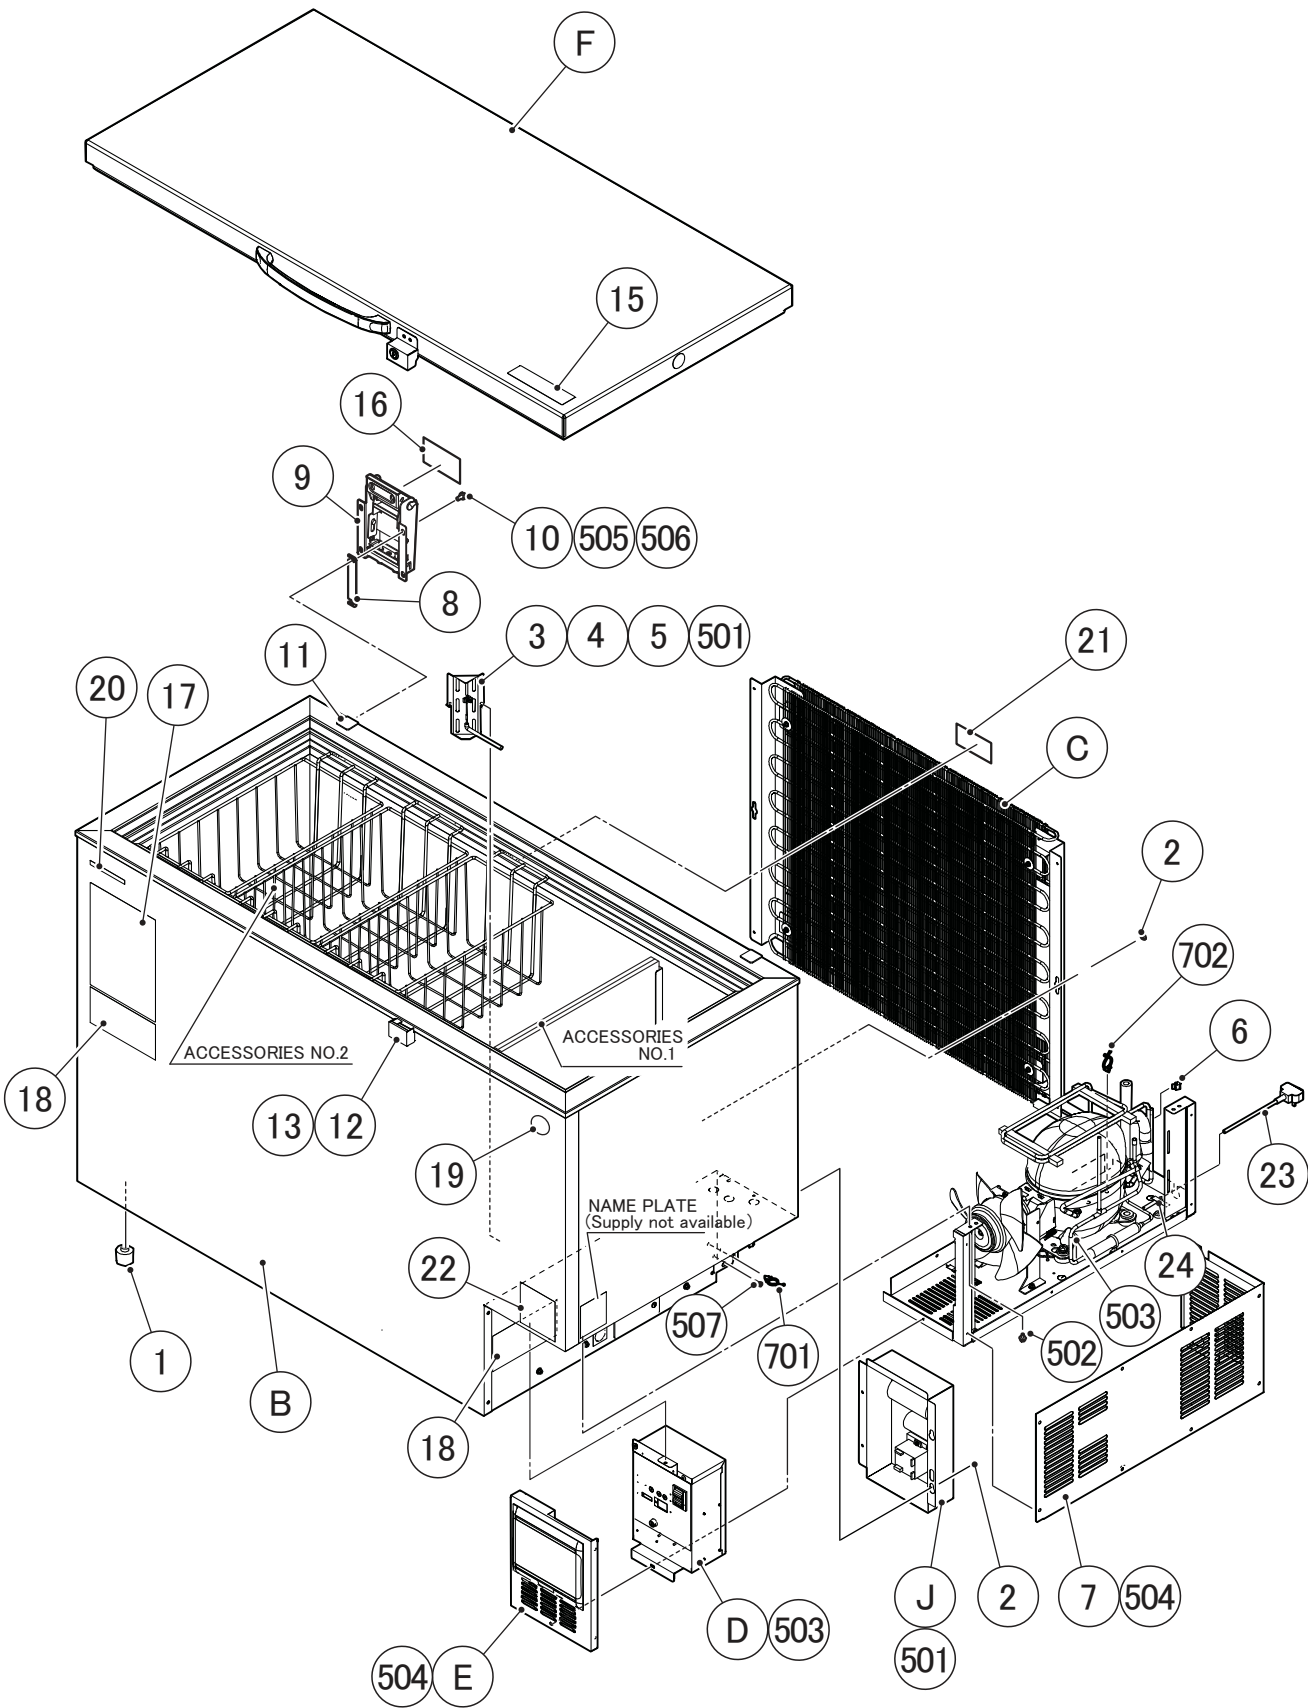

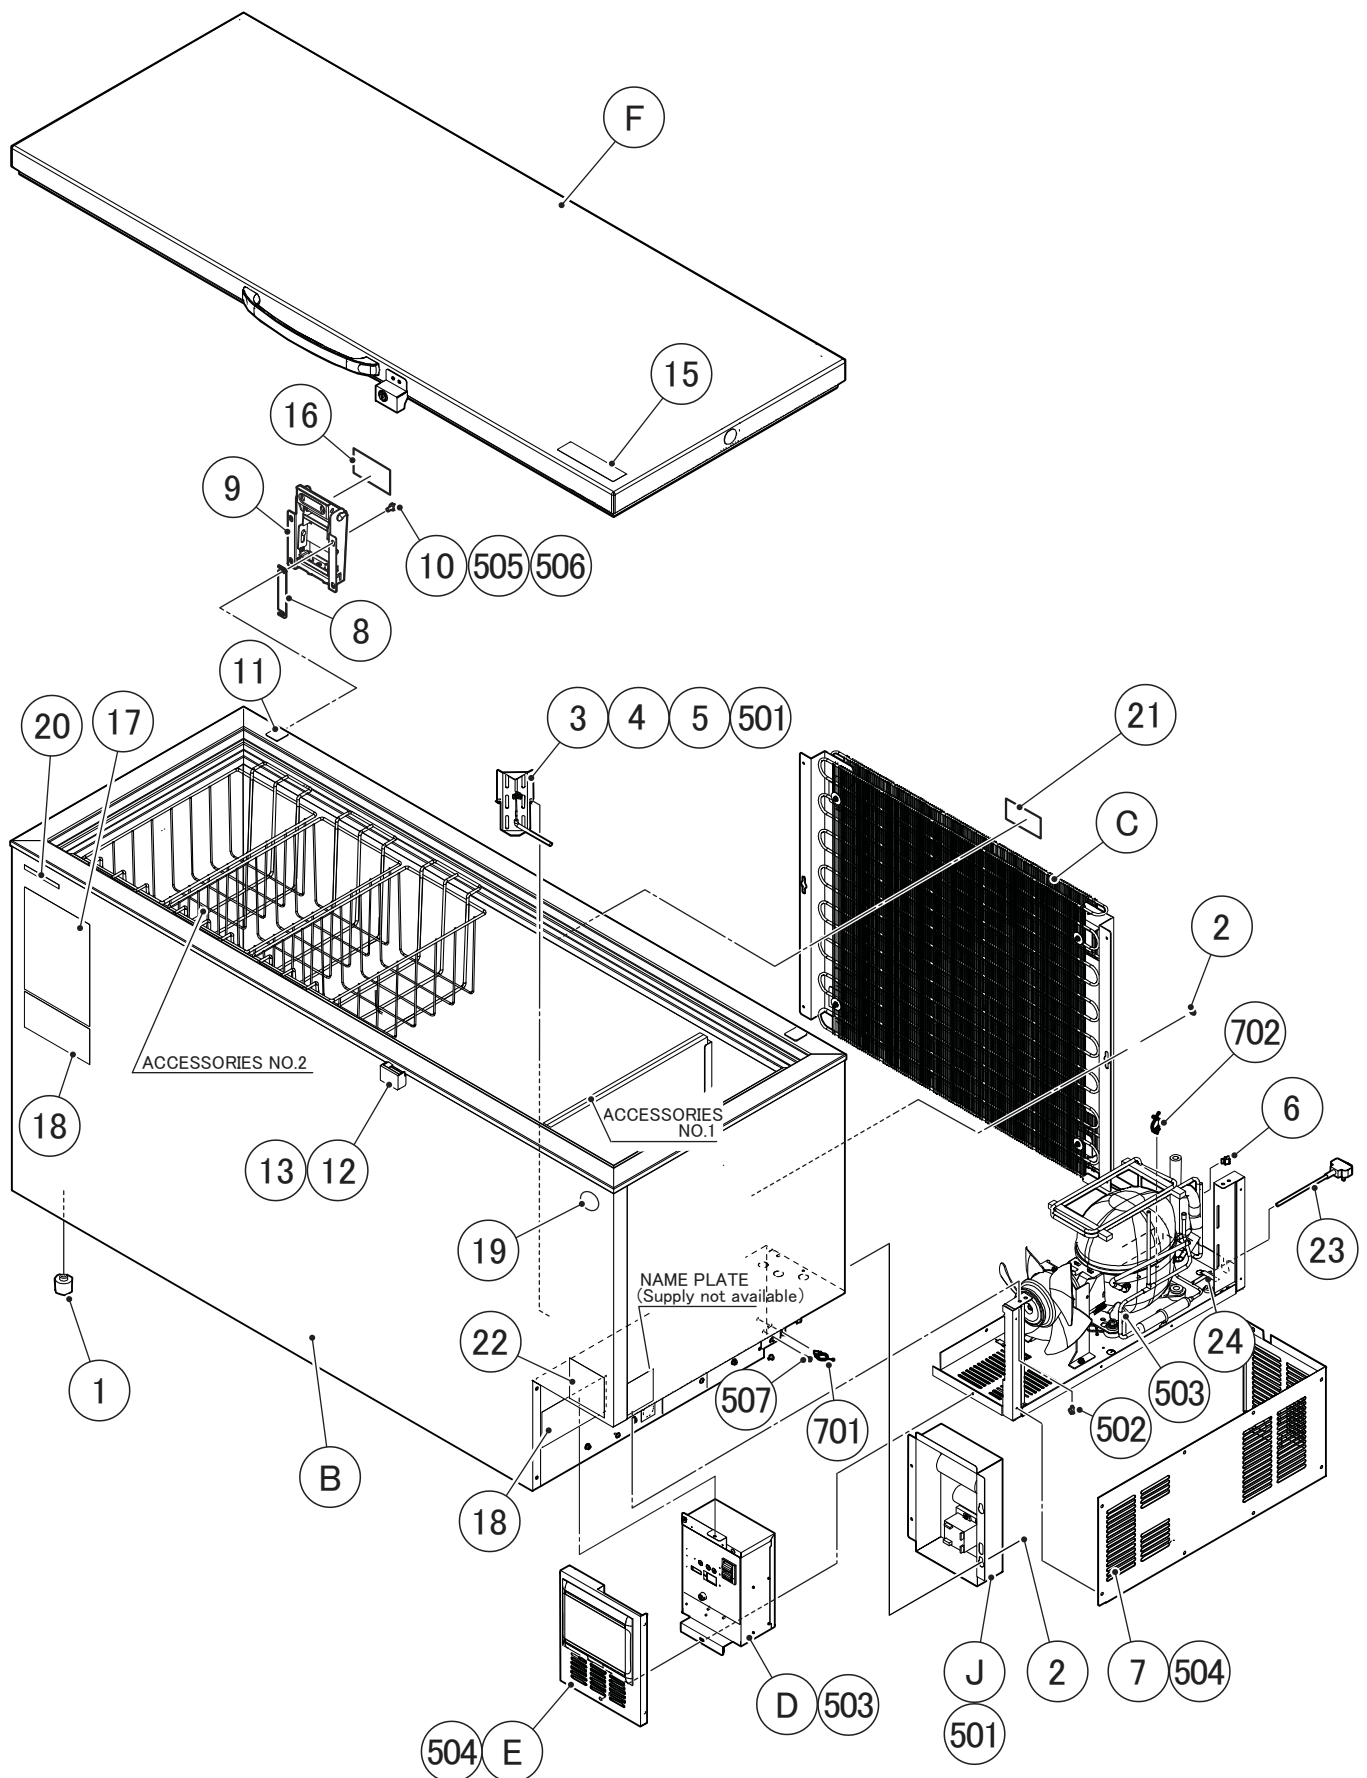


MODEL: HDF-140A-SEA HDF-300A-SEA HDF-400A-SEA				TITLE: A. DEEP FREEZER ASSY							
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER							
				D-0 and later							
B	BODY		Supply not available	1							
C	REFRIGERATION CIRCUIT	* Repair of refrigeration circuit is not allowed. HDF-140A-SEA	1H7959A01	1							
		* Repair of refrigeration circuit is not allowed. HDF-300A-SEA HDF-400A-SEA,	1H7944A01	1							
D	CONTROL BOX ASSY	This part number does not include labels. Order D-NO.5 together. HDF-140A-SEA	2X7980A01	1							
		This part number does not include labels. Order D-NO.5 together. HDF-300A-SEA HDF-400A-SEA	2X7639A01	1							
E	FRONT PANEL ASSY		3Z3868A01	1							
F	DOOR ASSY	HDF-140A-SEA	2X7947A01	1							
		HDF-300A-SEA	2X7947A02	1							
		HDF-400A-SEA	2X7947A03	1							
J	CONTROL BOX (B) ASSY	This part number does not include labels. Order J-NO.5 together. HDF-300A-SEA HDF-400A-SEA	3Z5130A01	1							
K	ACCESSORIES		ACCE---	1							
1	PLASTIC FOOT		427904-01	4							
2	TAPER COLLAR	HDF-140A-SEA	4H0171-01	2							
		HDF-300A-SEA HDF-400A-SEA		4							
3	CLAMP		463936-01	1							
4	THERMISTOR		P06502-01	1							
5	THERMISTOR COVER		4Z2460M01	1							
6	CLIP-THERMISTOR		4R2938-01	1							
7	SIDE PANEL	HDF-140A-SEA	3Z3728M01	1							
		HDF-300A-SEA HDF-400A-SEA	3Z3728M03	1							

MODEL: HDF-140A-SEA HDF-300A-SEA HDF-400A-SEA				TITLE: A. DEEP FREEZER ASSY						
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER						
				D-0 and later						
8	SPACER - HINGE		4Z2474M01	8						
9	AUTOMATIC HINGE	Order NO.16 label - hinge together. HDF-140A-SEA	P06861-01	2						
		Order NO.16 label - hinge together. HDF-300A-SEA HDF-400A-SEA	P06479-01	2						
10	TORX BOLT M6x16		P06041-02	12						
11	SPACER - JOINER		4Z2801P01	2						
12	DOOR LOCK (LOWER)		3Z3735M01	1						
13	BRACKET - KEY		4Z2489M01	1						
14	WARNING LABEL - ELECTRIC SHOCK	HDF-140A-SEA	484612L01	1						
15	LABEL - DOOR		490709L01	1						
16	LABEL - HINGE		490710L01	2						
17	INSTRUCTION LABEL		289507L01	1						
18	CAUTION LABEL - FIRE		399625L01	2						
19	CHARACTER LABEL - PENGUIN		468184-01	1						
20	EMBLEM		488413L01	1						
21	PL LABEL - HOT		490711L01	1						
22	LABEL - ADVISORY		399626L01	1						
23	HARNESS - POWER SUPPLY CORD	Order NO.24 label - terminal together. HDF-140A-SEA	2X7965G01	1						
		Order NO.24 label - terminal together. HDF-300A-SEA HDF-400A-SEA	2X7964G01	1						
24	LABEL - TERMINAL		452379-04	1						
501	LAMI-TITE SCREW	HDF-140A-SEA	P00449-03	2						
		HDF-300A-SEA HDF-400A-SEA		4						
502	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0510S0	7						
503	TRUSS HEAD SCREW		FST0406S0	3						
504	SCREW - S-TITE		476507M03	11						
505	FLAT WASHER		FWPL06S0	12						
506	SPRING WASHER		FWSP06S0	12						
507	HEX HEAD BOLT		FBH0412S0	1						
701	WIRE RETAINER	HDF-300A-SEA HDF-400A-SEA	427902-05	1						
702	WIRE RETAINER		427902-02	1						

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

B. BODY

(D-0)and later

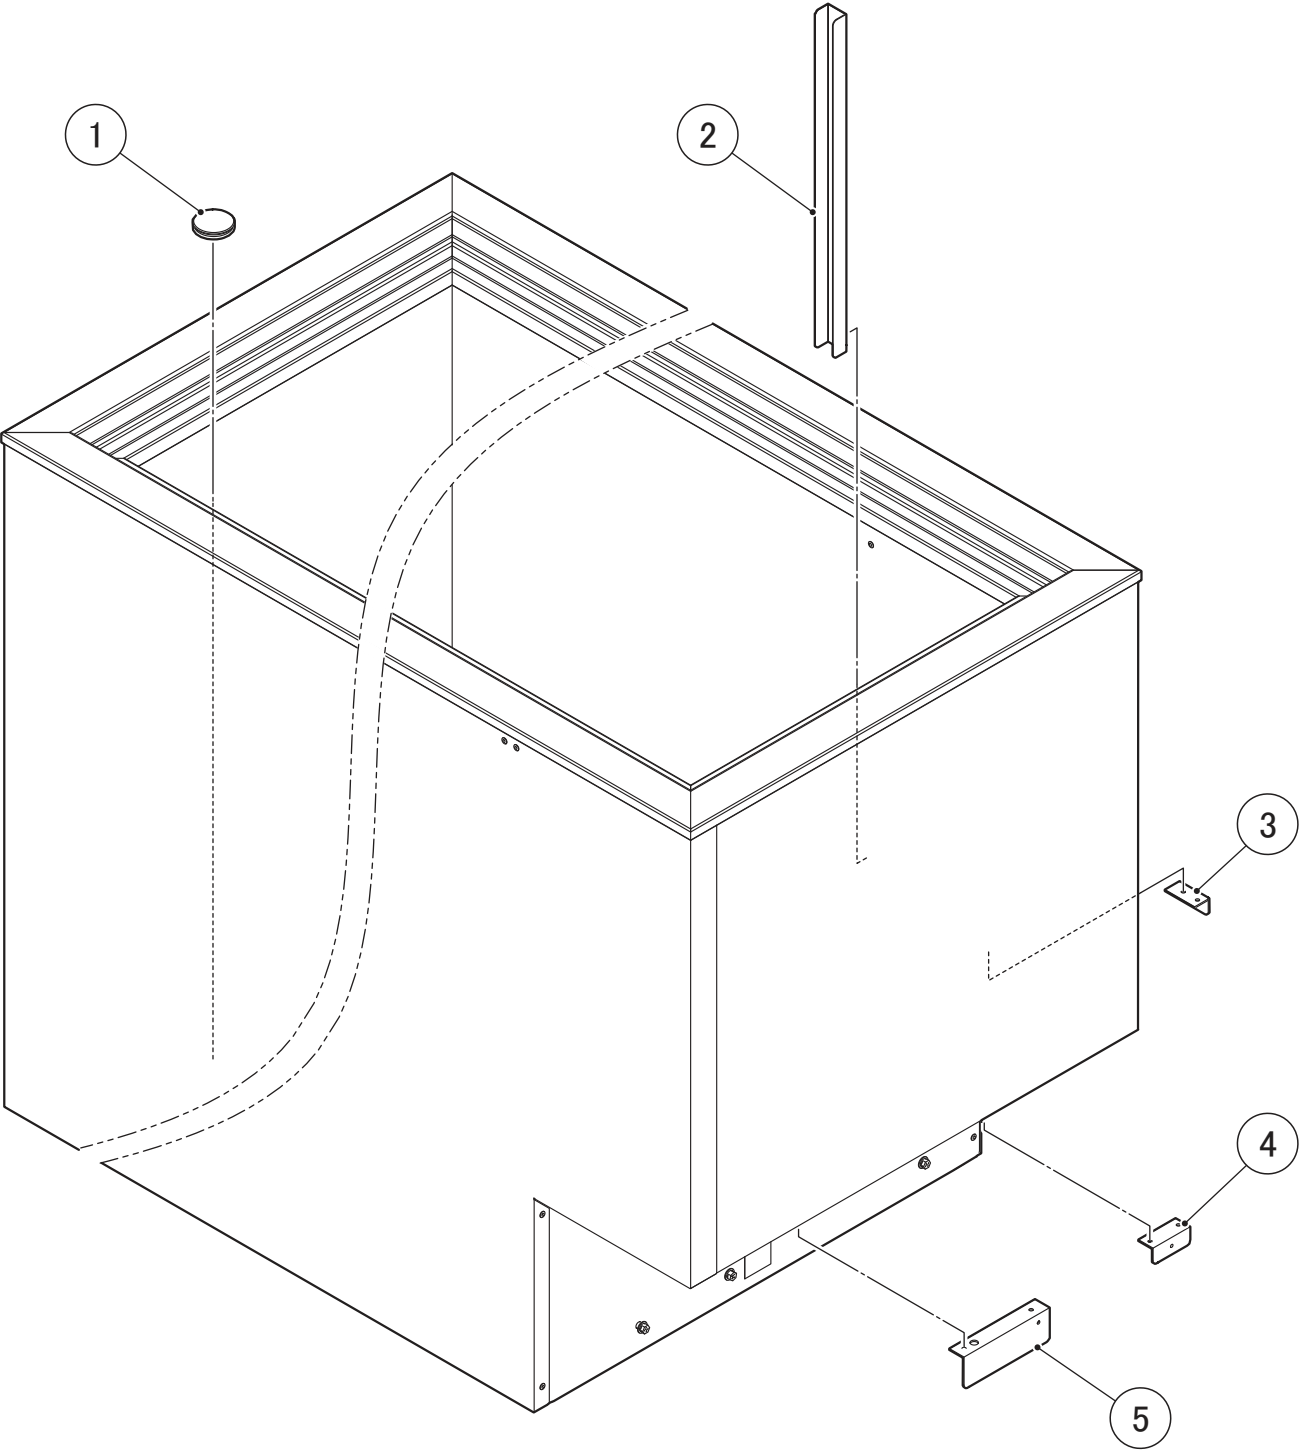


[illegible]

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

C. REFRIGERATION CIRCUIT

(D-0)and later

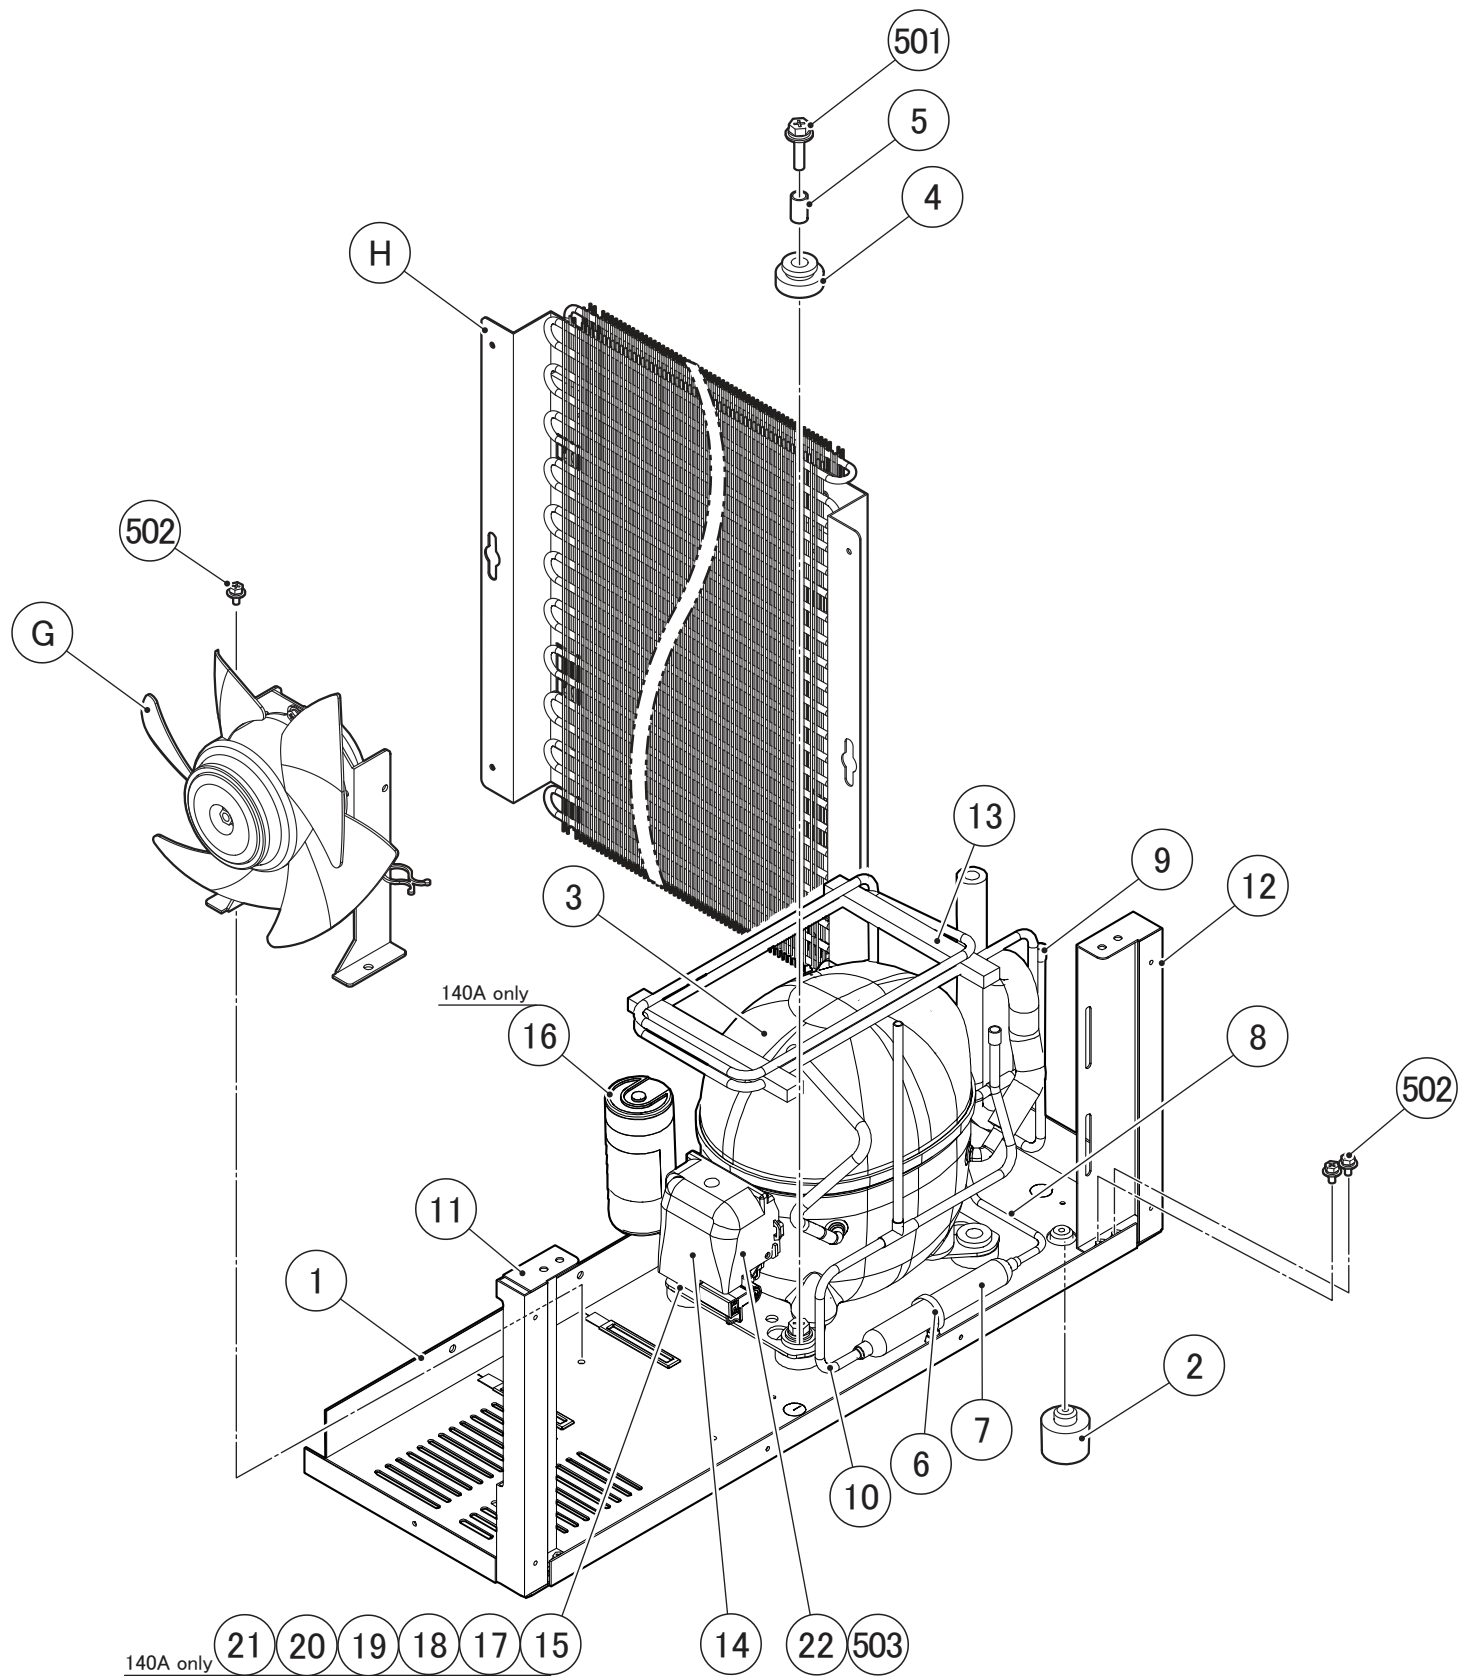


MODEL: HDF-140A-SEA HDF-300A-SEA HDF-400A-SEA				TITLE: C. REFRIGERATION CIRCUIT						
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER						
				D-0 and later						
G	FAN MOTOR ASSY		3Z3866A01	1						
H	WIRE CONDENSER	HDF-140A-SEA	Supply not available	1						
		HDF-300A-SEA HDF-400A-SEA	Supply not available	1						
1	UNIT BASE		4Z3440G01	1						
2	PLASTIC FOOT		427904-01	2						
3	COMPRESSOR - WELD	HDF-140A-SEA	Supply not available	1						
		HDF-300A-SEA HDF-400A-SEA	Supply not available	1						
4	RUBBER GROMMET		P04000-01	4						
5	SLEEVE		P04001-01	2						
6	TIE		457167-01	1						
7	DRIER		Supply not available	1						
8	COPPER TUBE DRY - HEX		Supply not available	1						
9	COPPER TUBE - WIRE CONDENSER	HDF-140A-SEA	Supply not available	1						
		HDF-300A-SEA HDF-400A-SEA	Supply not available	1						
10	CHARGE TUBE - DRIER		Supply not available	1						
11	FRAME		3Z3774M01	1						
12	FRAME		3Z3774M02	1						
13	TUBE - DISCHARGE PIPE		4Z2796Z01	2						
14	TERMINAL COVER	HDF-140A-SEA	P03143-01	1						
		HDF-300A-SEA HDF-400A-SEA	P02814-01	1						
15	PROTECTOR	HDF-140A-SEA	P07029-01	1						
16	START CAPACITOR	HDF-140A-SEA	P03291-01	1						
17	PROTECTOR RETAINER	HDF-140A-SEA	P02815-01	1						
18	STARTING RELAY	HDF-140A-SEA	P03898-01	1						
19	TERMINAL BOARD	HDF-140A-SEA	P02612-01	1						
20	SELF TAPPING SCRW M4-21	HDF-140A-SEA	P02616-01	1						
21	SELF TAPPING SCREW M4-11	HDF-140A-SEA	P02615-01	1						
22	HARNESS - EARTH WIRE		3Z5301Z01	1						
501	Hex Head Bolt (Spring Washer & Flat Washer)		FBK0830S0	2						
502	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0510S0	6						
503	SCREW		P00840-01	1						

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

D. CONTROL BOX ASSY

(D-0)and later

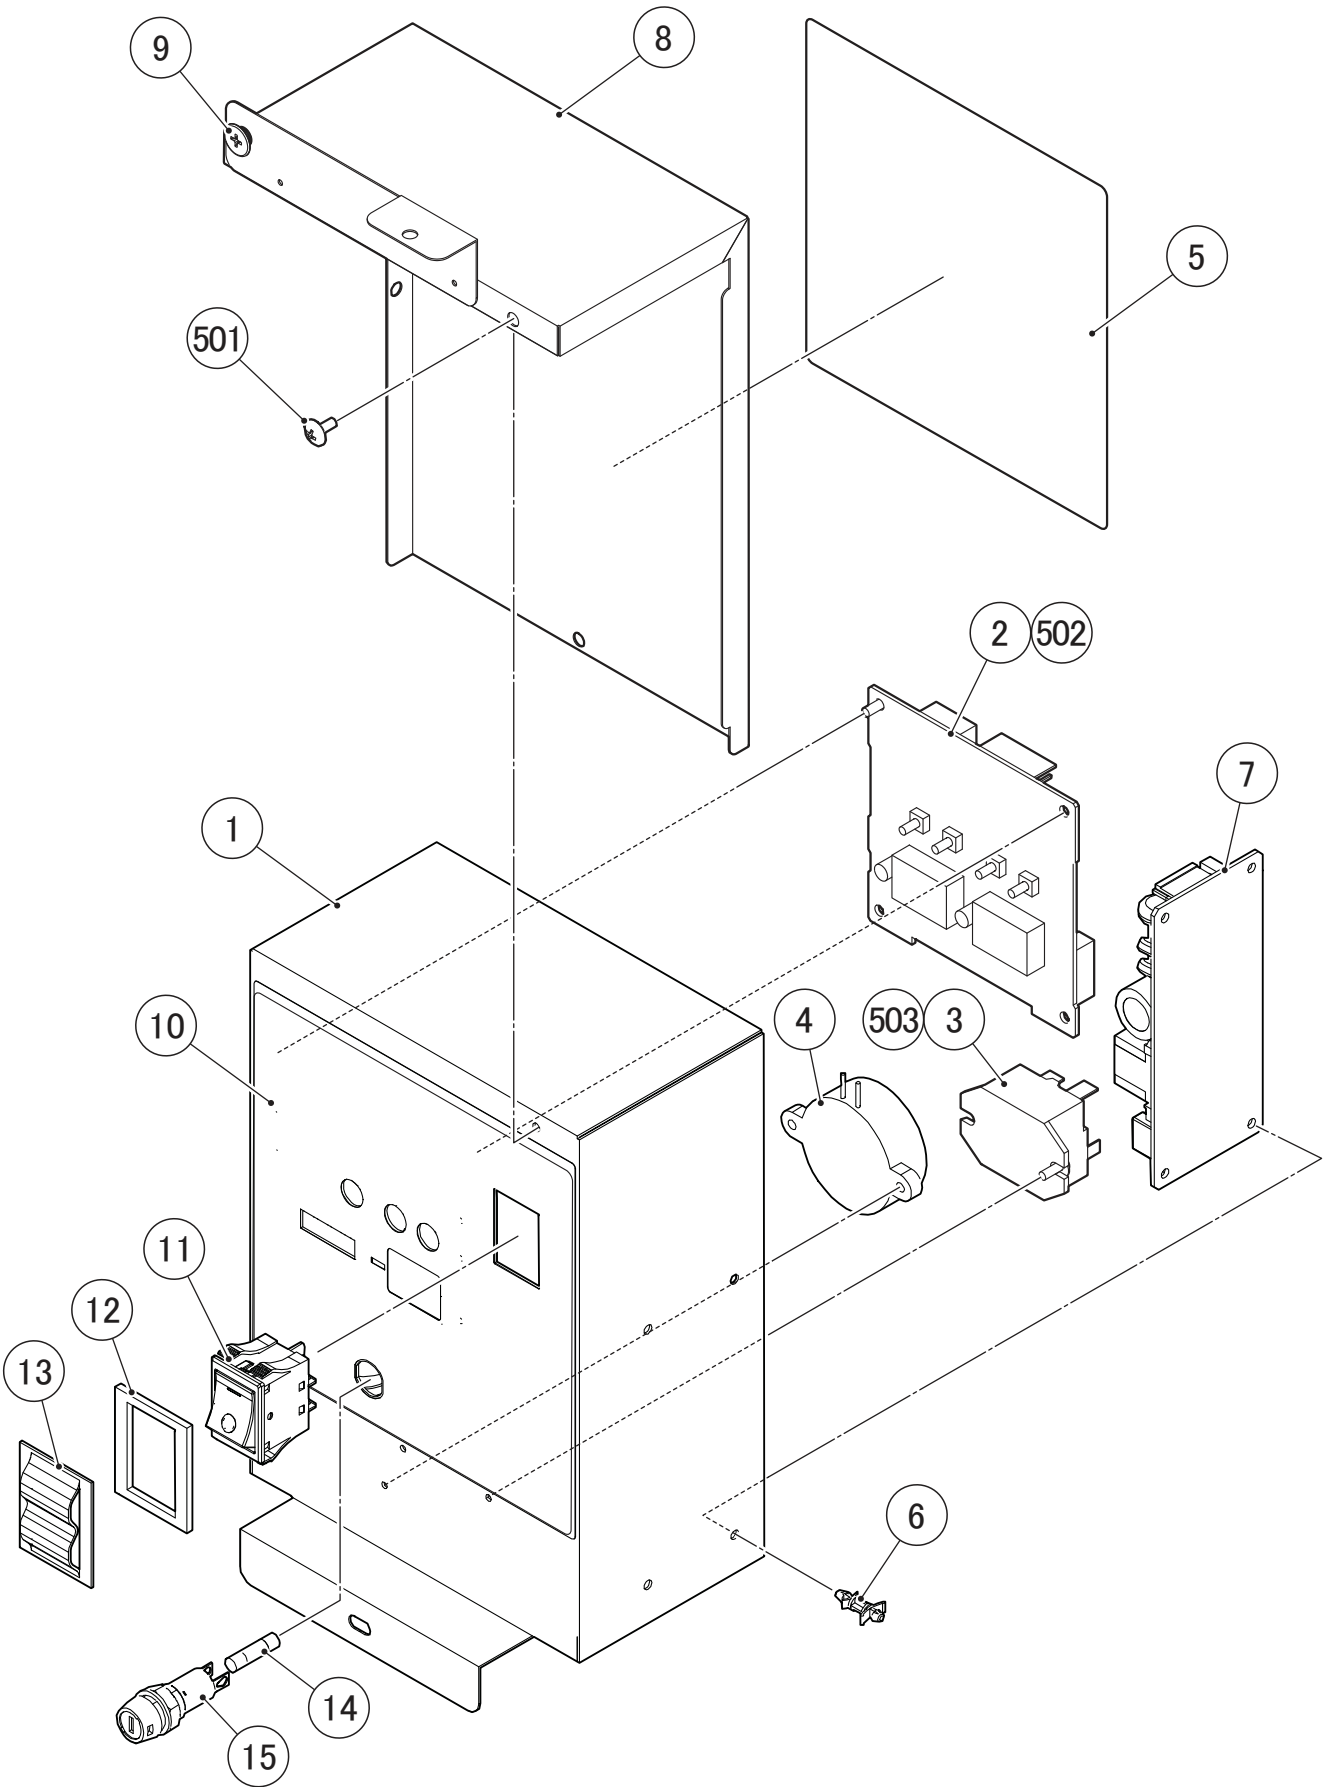


[illegible]

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

E. FRONT PANEL ASSY

(D-0)and later

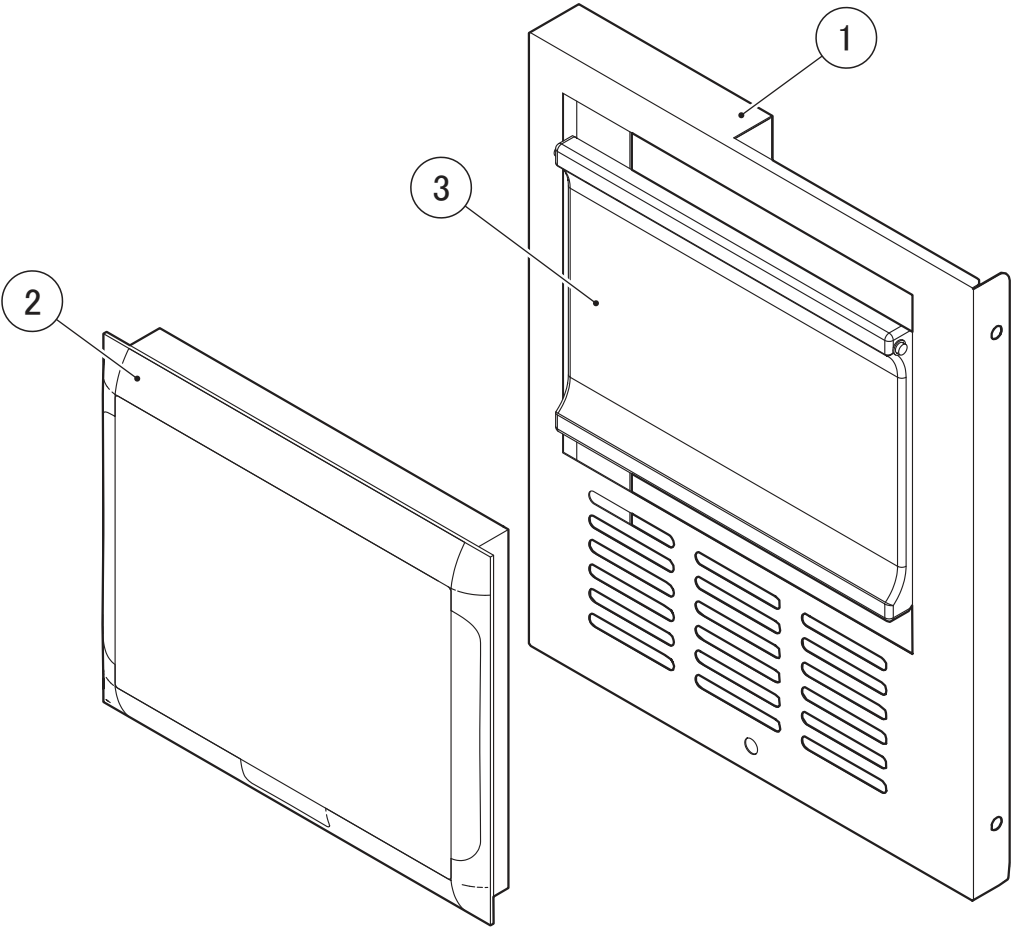


[illegible]

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

F. DOOR ASSY

(D-0)and later

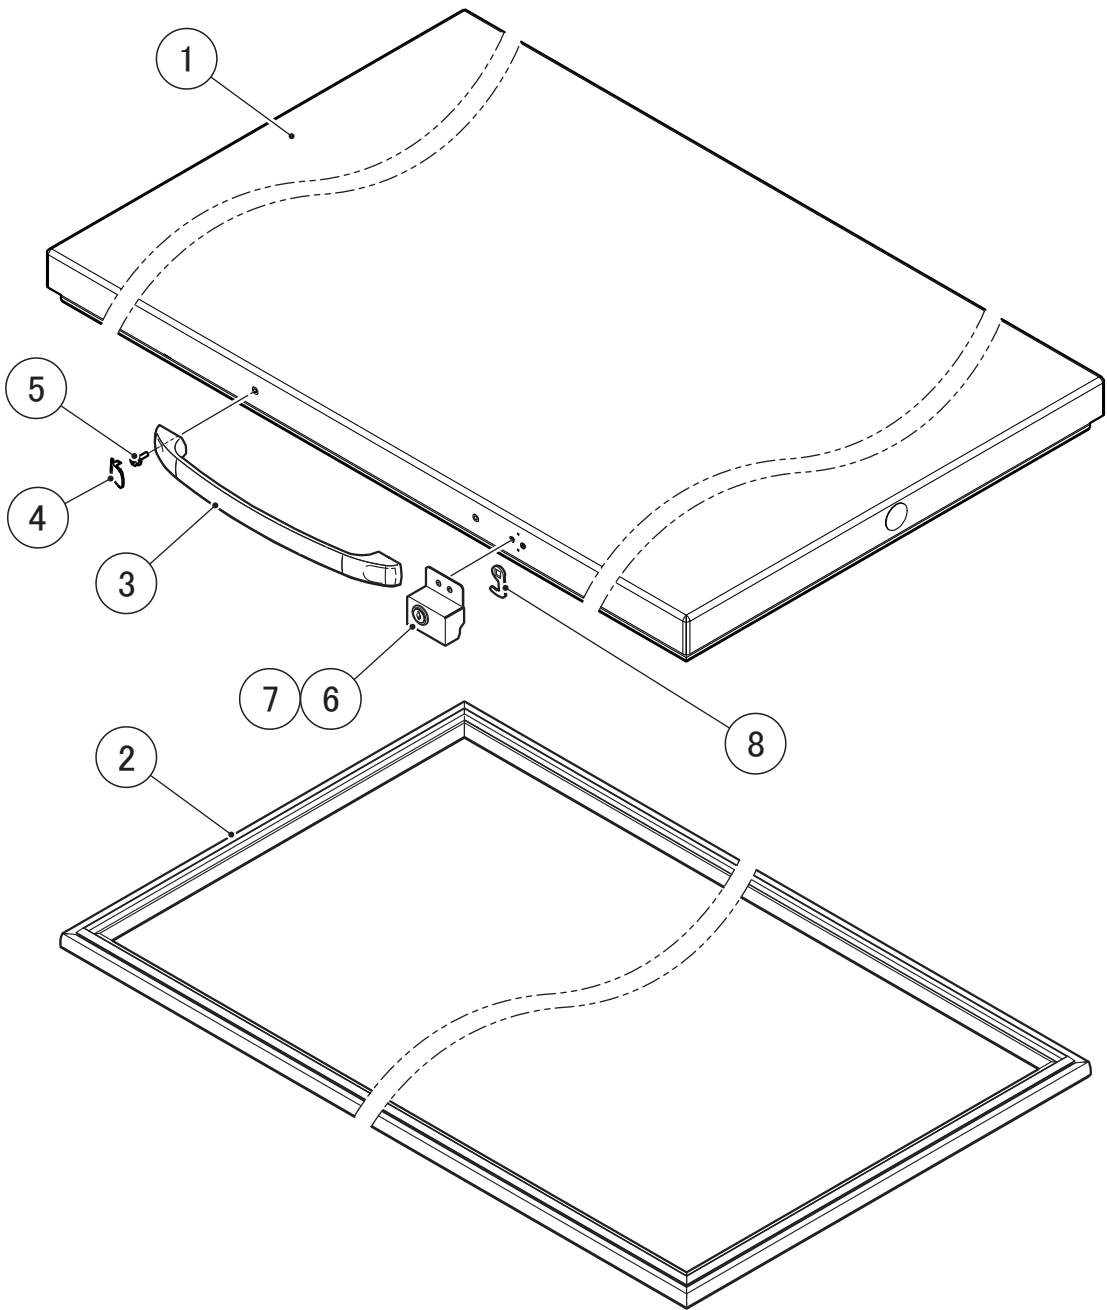


[illegible]

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

G. FAN MOTOR ASSY

(D-0)and later

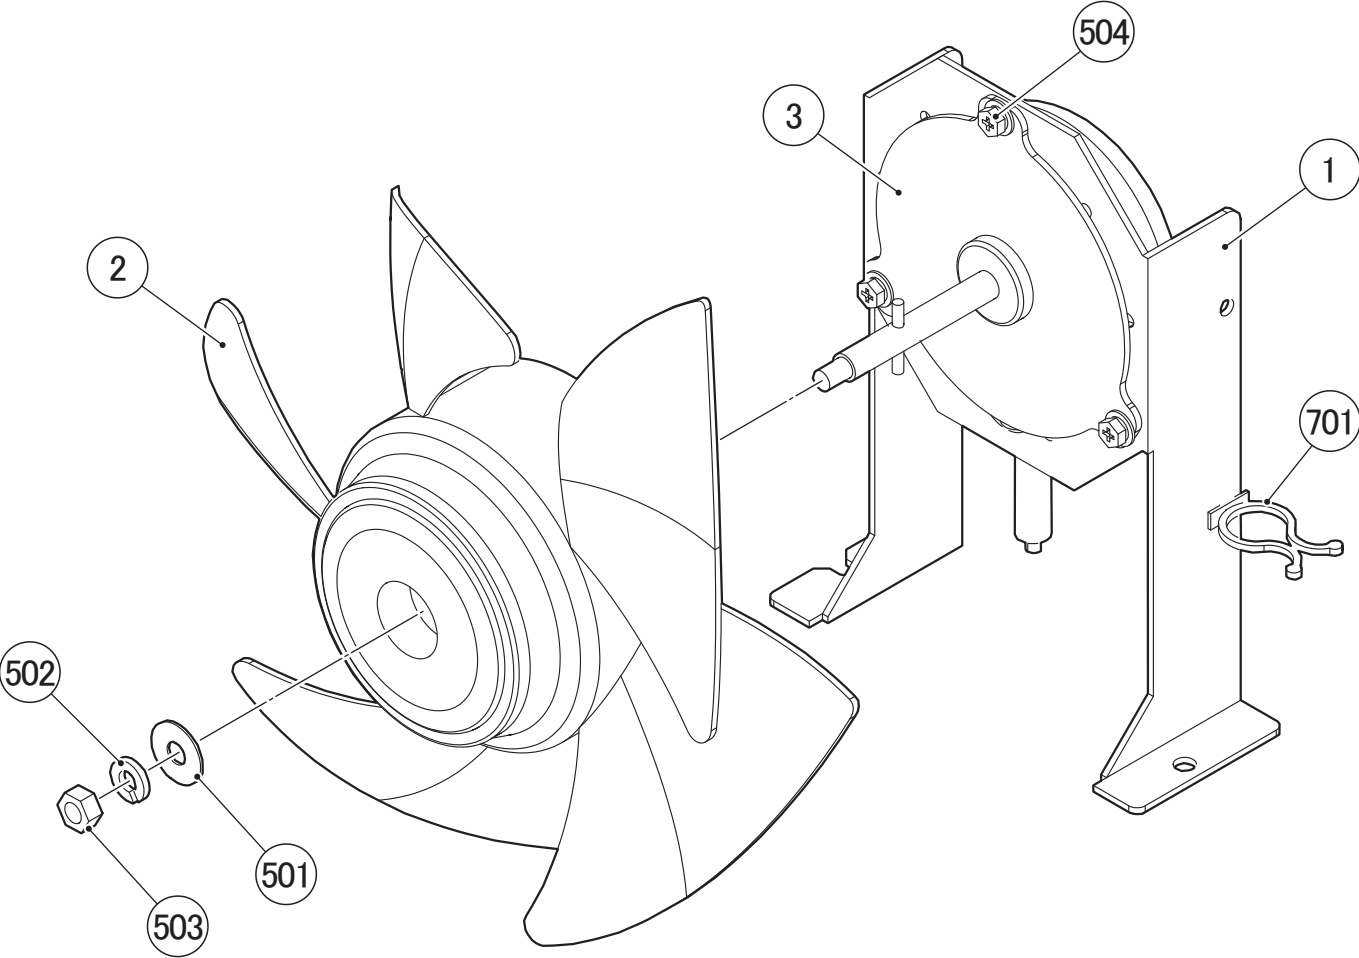


[illegible]

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

H. WIRE CONDENSER

(D-0)and later

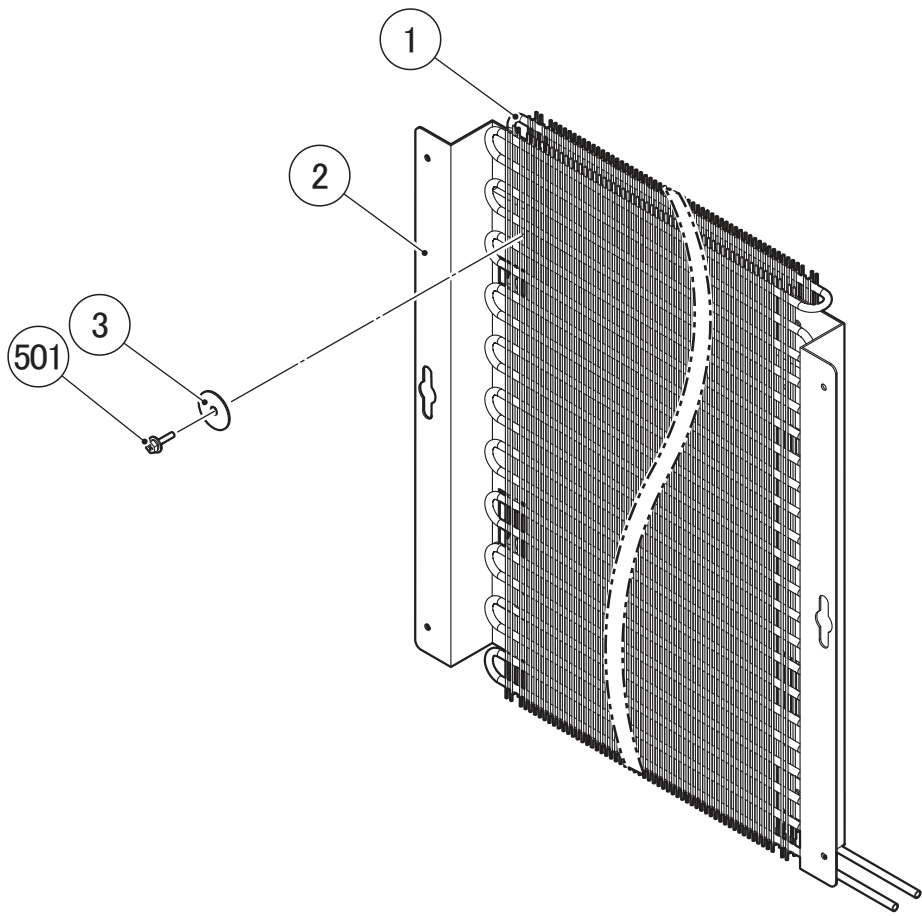


[illegible]

HDF-300A-SEA
HDF-400A-SEA

J. CONTROL BOX (B) ASSY

(D-0)and later





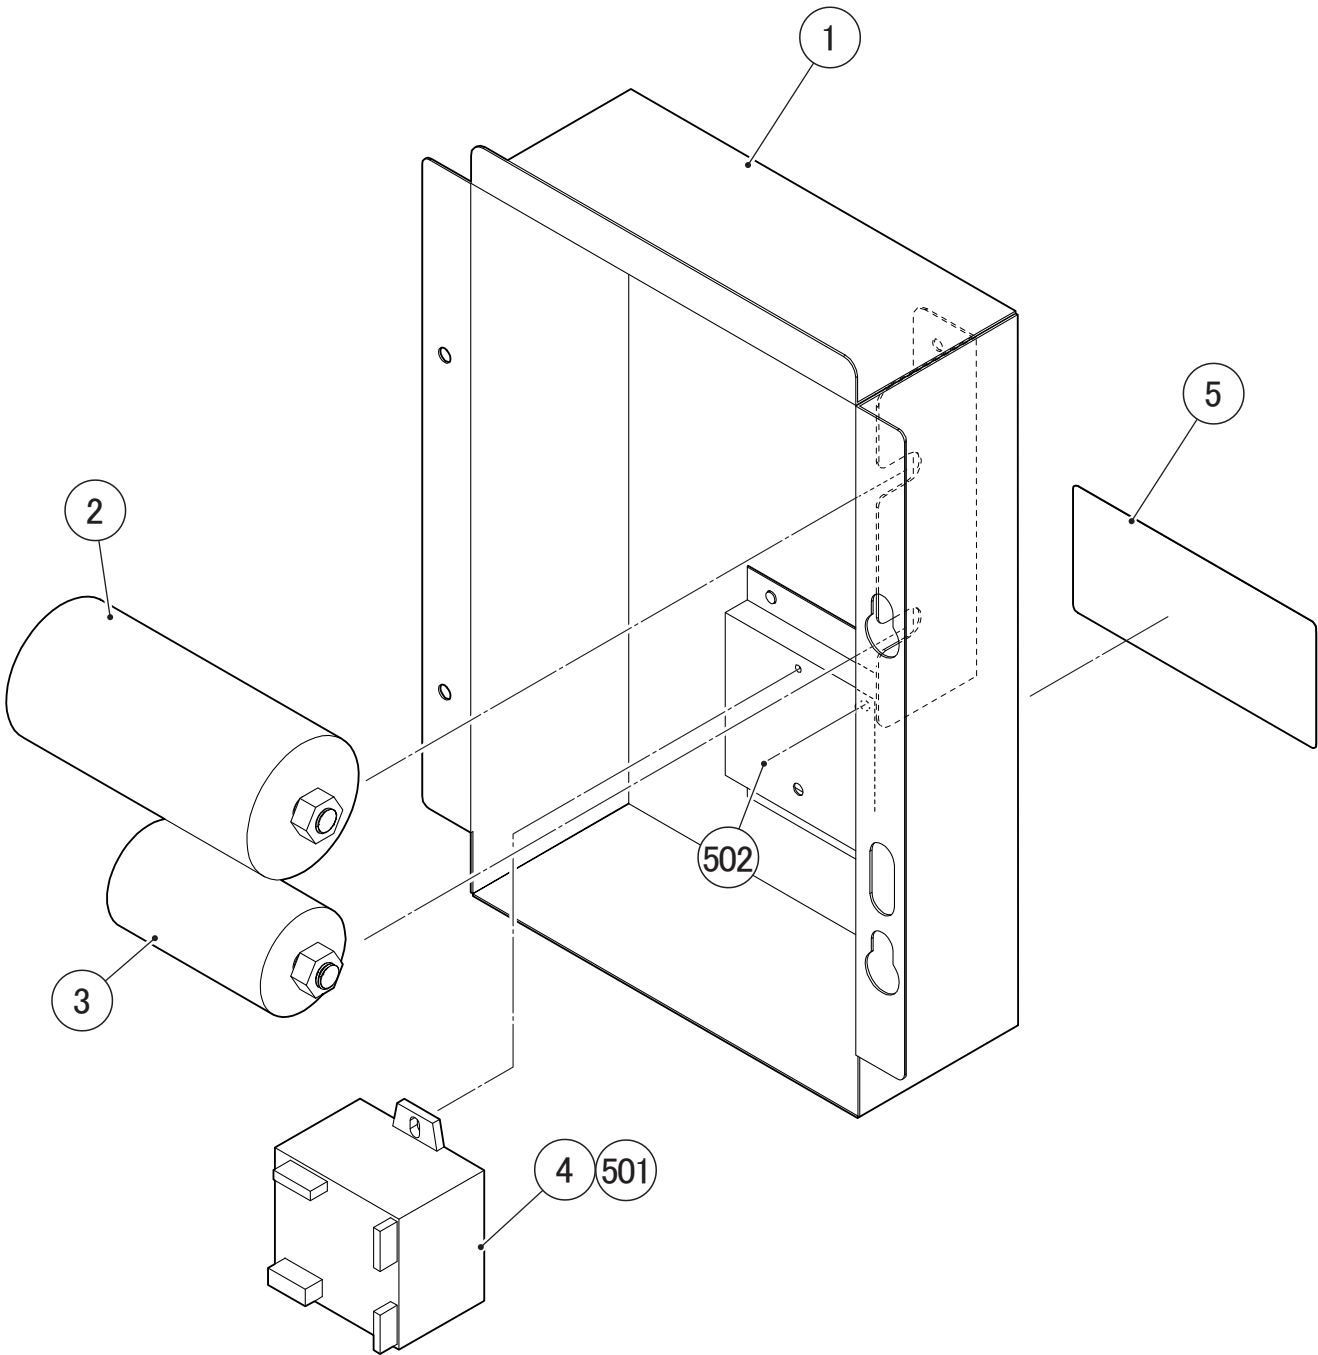


[illegible]

HDF-140A-SEA
HDF-300A-SEA
HDF-400A-SEA

K. ACCESSORIES

(D-0)and later

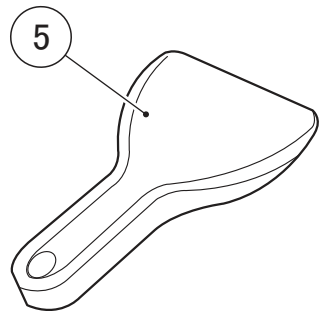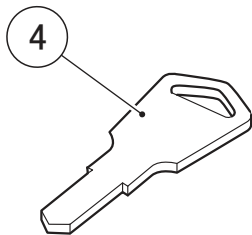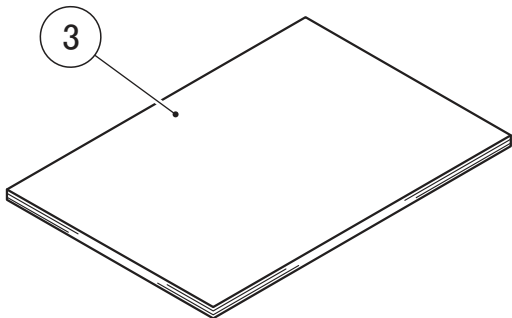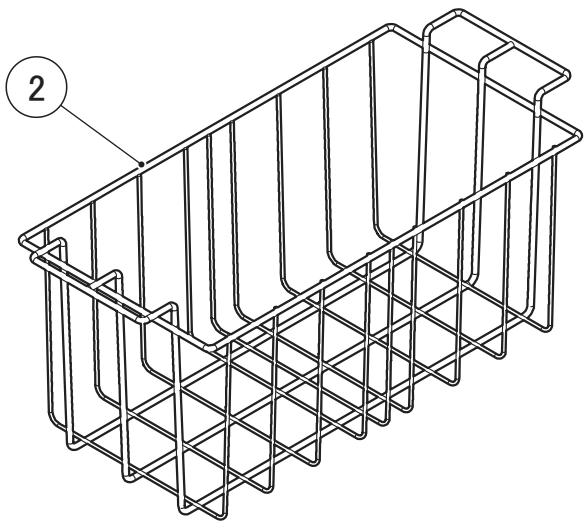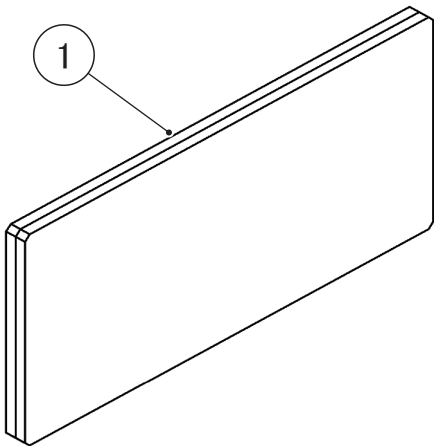

[illegible]